

Honeywell






 


 

 
Quick Guide



 

As an ENERGY STARSM partner, Honeywell has determined that this product meets the ENERGY STARSM guidelines for energy efficiency.


 

 







Quick Guide

NOTE: Press the **RUN** key at anytime to exit programming.

1. Set the Clock	Press	Display
a. Enter clock setting mode		
b. Set current day		
c. Set current time	 	
d. Exit clock setting mode		

2. Starting Over		
a. Optional: Clear all programming (press SELECT PERIOD and hold CANCEL until PROG CLR is displayed)	 	 

3. Program 1st Day		
a. Enter program mode		
b. Select a day, start with Monday		
c. Select a period, start with WAKE		
d. Set the period starting time	 	

Press

Display

- e. Set the temperature for heating



HEAT SET PT COOL
68° 78°
HEAT COOL SET PT
70° 78°

- f. Set the temperature for cooling



HEAT COOL SET PT FAN AUTO
70° 78°
WAKE
HEAT COOL SET PT FAN AUTO
70° 74°
WAKE

NOTE: If you lower cool temperature closer than 3°, the heat setpoint will lower to keep the 3° differential (in AUTO).

- g. Choose fan operation:

- AUTO—on with equipment
- ON—fan on continuously
- CIRCULATE—on at least 30% of the time




HEAT COOL SET PT FAN AUTO
70° 74°
WAKE




 
- h. Choose outdoor air ventilation (if installed)



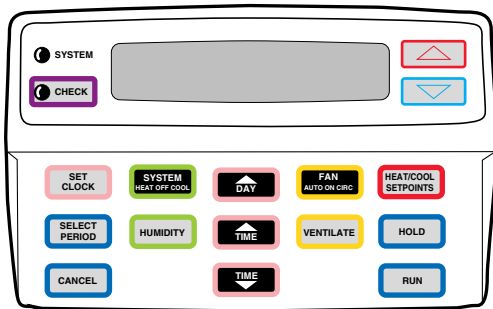









 






 
HEAT COOL SET PT FAN AUTO
70° 74°
WAKE VENT







M6260

	Press	Display
i.	Repeat steps 3b-h to program LEAVE, RETURN and SLEEP for the first day	
j.	Copy program to rest of the days (Hold DAY key to display each weekday)	 
k.	Exit programming mode (saves program)	 






4. Changing the Program

a.	Enter program mode	 
b.	Locate desired day and period	 
		 
c.	Change time	 
		
d.	Change temperature	 
		
e.	Change fan setting	 
f.	Change vent setting	 
g.	Exit program mode	 




5. Programming System, Humidity and Frost

	Press	Display
a. Set system		SYSTEM 000
b. Set % humidity (to program your frost setting if outdoor sensor is installed, press humidity key a second time)		HUMID 20%
		HUMID 30%
		

Changing the Program Temporarily

a. Changing the temperature temporarily for current period	  	60° 88° TEMPORARY
b. Changing the fan setting temporarily for current period		60° 88° FAN CIRC TEMPORARY
c. Changing the vent setting temporarily for current period		60° 88° FAN CIRC TEMPORARY VENT

Holding the Program

a. Hold indefinitely	  	HOLD HEAT SET PT COOL 60° 88°
----------------------	---	----------------------------------

Press**Display**

- b. Vacation hold for 1 to 7 days, use step a (hold indefinitely) and then use the following steps



9:00^{AM}
SUN MON TUE WED THU FRI SAT

 


1:00^{AM}
SUN MON TUE WED THU FRI SAT



HEAT SET PT COOL
HOLD 60° 88°

- c. End hold




9:00^{AM}
MON

Checking Readings and Settings

- a. Press check repeatedly to see room humidity, outside temperature, fan setting, ventilator and system settings



See Owner's Guide, form 69-0891 for more information. If you have questions regarding the Honeywell Perfect Climate Comfort Center™ please visit our web site at www.honeywell.com/yourhome or call the customer information line at 1-800-468-1502.

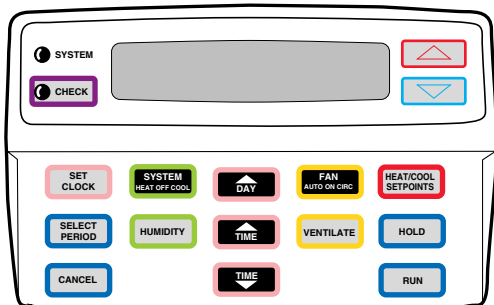

M6260